




What's in the box ...

Removable grille
on speakers (not shown)

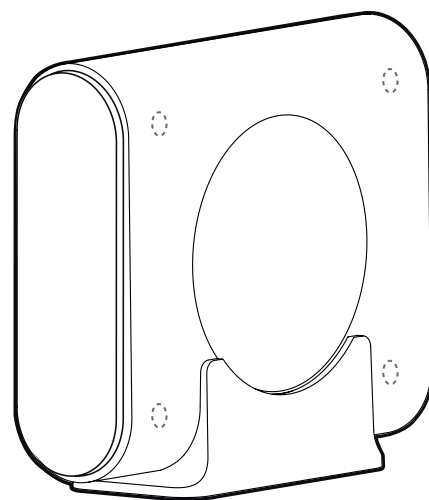

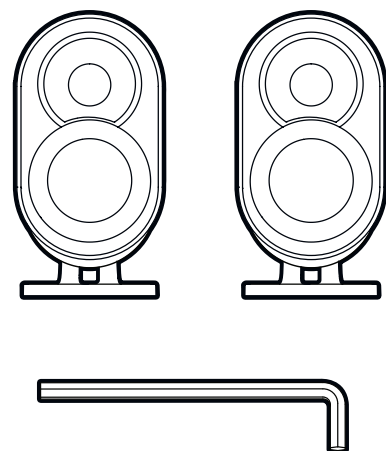


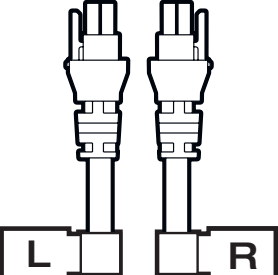
 
Vertically: Do not operate
subwoofer without stand.

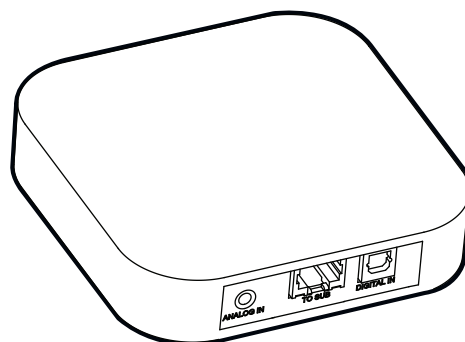Horizontally: Remove stand and use
bumper pads (included) on each corner.




Remote Control
includes CR 2025 3V
lithium battery

IMPORTANT: System can only be
operated using the Remote Control.


- | | | | | |
|---|---|---|---|---|
| 6' Power Cable
This end
... to subwoofer | 4' Optical Cable
... to control box
"DIGITAL IN" | 6' 3.5-mm
... to control box
"ANALOG IN" | 15' Speaker Cable
... to subwoofer | 10' Controller Cable
... to control box
"TO SUB" |
|  |  |  |  |  |
| 1 | 2 | 3 | 4 | 5 |
| This end
... to wall outlet | ... to TV for
digital audio | ... 3.5-mm to TV
for analog audio | ... to speaker | ... to subwoofer |

BEFORE YOU BEGIN, READ THE SAFETY PRECAUTIONS AND IMPORTANT SAFETY INSTRUCTIONS INCLUDED IN THE OWNERS MANUAL.

1 Connect Both Speakers

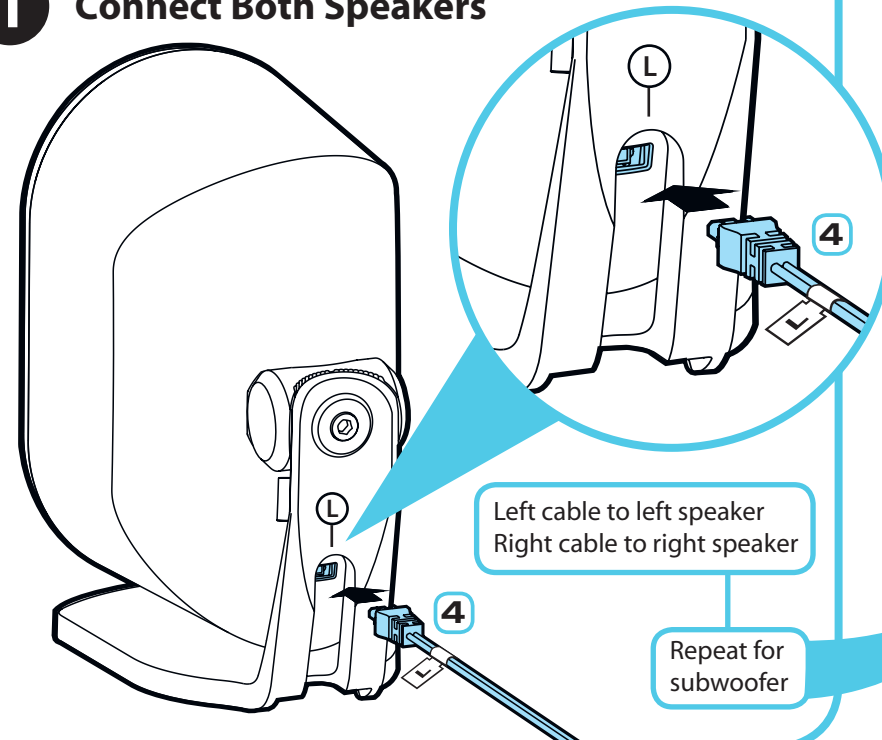


2 Connect Subwoofer

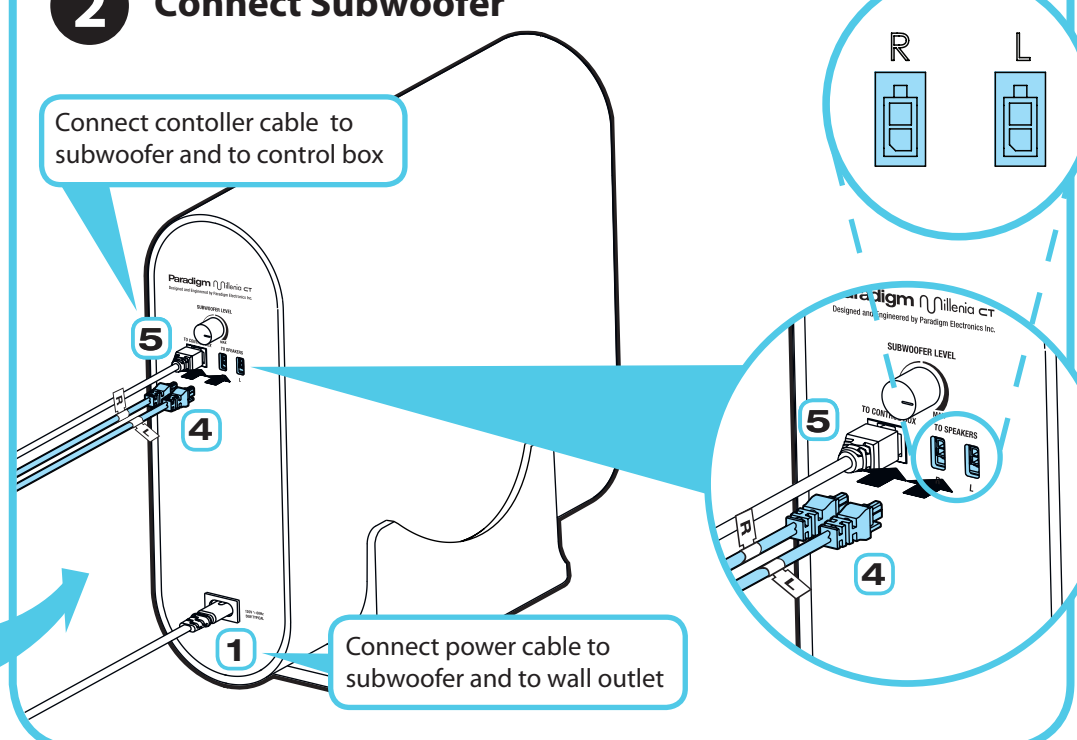


Using Sub In Horizontal Position:

IMPORTANT: Use bumper pads (included) to ensure necessary floor clearance.

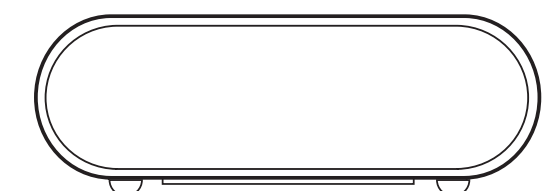


3 Connect Control Box

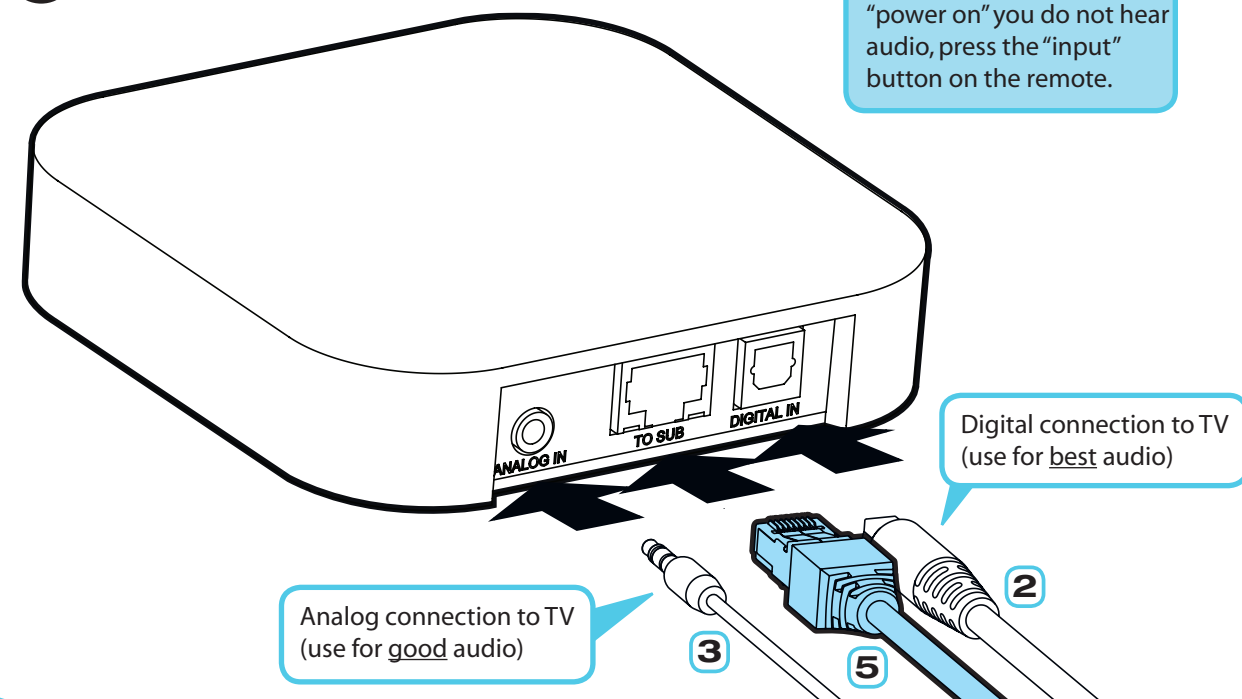

TIP: If after set-up and "power on" you do not hear audio, press the "input" button on the remote.


SUBWOOFER LEVEL

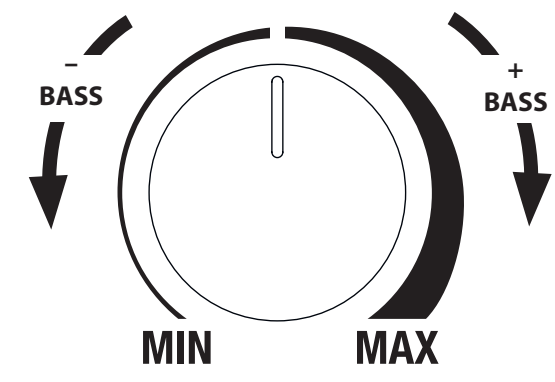


Your subwoofer's **LEVEL** switch is set to 12 o'clock to suit average preferences. If desired, adjust to match sound level of your speakers.

OPTIONAL:

A Loosen Bracket, Adjust for Desired Speaker Angle & Tighten Again

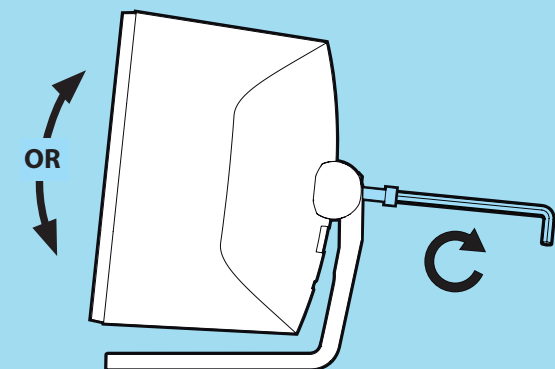

B To Use Control Box with Apple TV

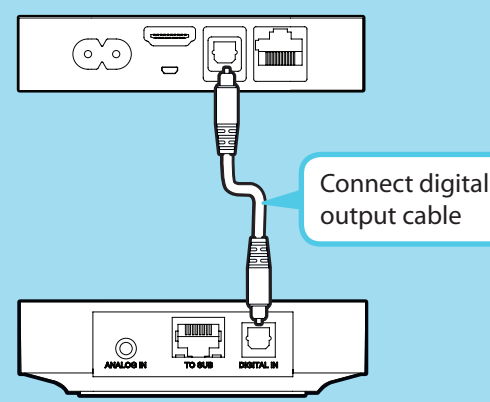

For further instructions, refer to your Apple TV Set-Up Guide.