



For more information visit www.paradigm.com




Paradigm Reference, MilleniaOne CT and associated proprietary and patented designs and technologies are registered trademarks of Paradigm Electronics Inc. Copyright © Paradigm Electronics Inc. All rights reserved. All other trademarks are the property of their respective owner(s). Paradigm Electronics reserves the right to change specifications and/or features without notice as design improvements are incorporated.

Paradigm Electronics Inc.
205 Annagem Blvd., Mississauga, ON Canada L5T 2V1

MAN0077
REV. 072012








What's in the box ...

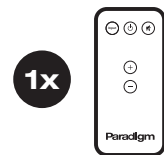


Remote Control
includes CR 2025
3V lithium battery

IMPORTANT: System can only be
operated using the Remote Control.

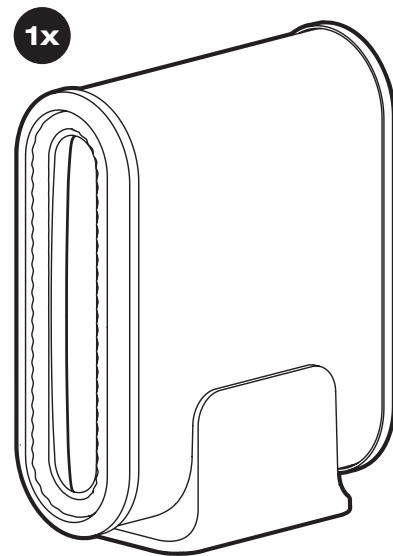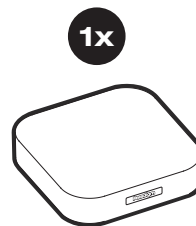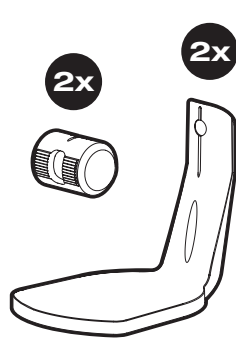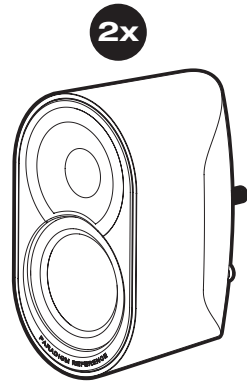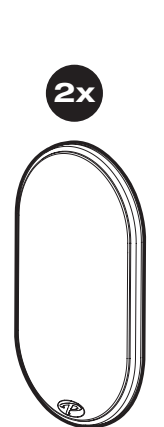


Vertically: Do not operate
subwoofer without stand.
Horizontally: Remove
stand and use bumper pads
(included) on each corner.

6' Power Cable
This end ...
to subwoofer

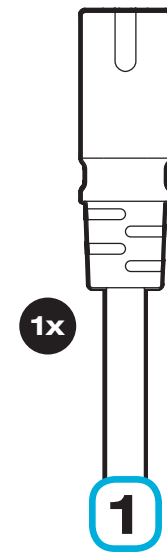


This end ...
to wall outlet

6' Optical Cable
... to control box
"DIGITAL IN"

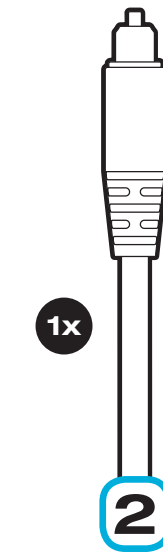

... to TV for
digital audio


6' 3.5-mm Cable
... to control box
"ANALOG IN"

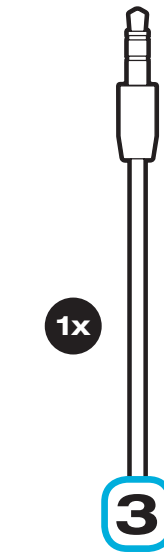

... 3.5-mm to TV
for analog audio


15' Speaker Cable
... to subwoofer

Pull off plastic tips
before attaching cables

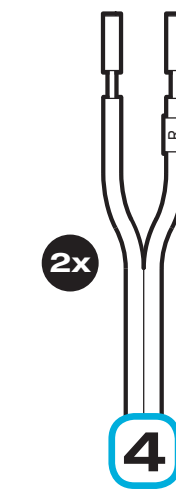

... to speaker

15' Controller Cable
... to control box
"TO SUB"

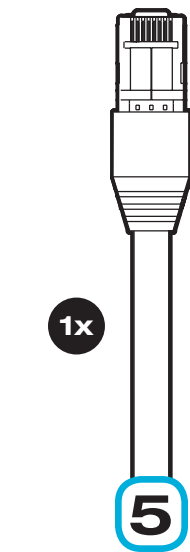

... to subwoofer

BEFORE YOU BEGIN, READ THE SAFETY PRECAUTIONS AND IMPORTANT SAFETY INSTRUCTIONS INCLUDED IN THE OWNERS MANUAL.

1 Wire Speakers

Press down on binding post to allow wire access. Left cable to left speaker. Right cable to right speaker.


(+) to (+), (-) to (-)

2 Attach Speakers to Stands

DO NOT pinch wires when attaching speakers to stands

NOTE: Pre-attached wall mounting brackets must be removed in order to attach stands


Tighten knob to secure stand

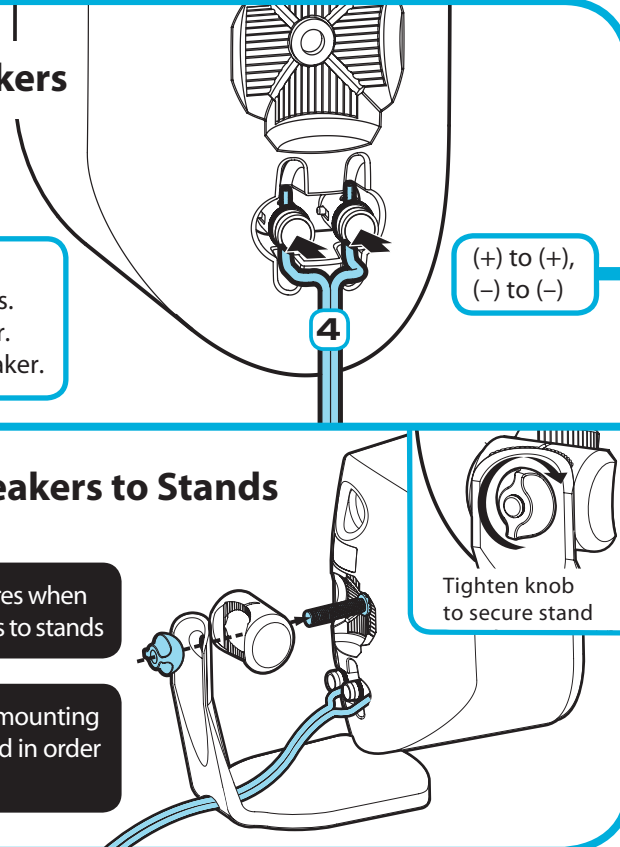

3 Connect Subwoofer

Connect controller cable to subwoofer and to control box

Connect power cable to subwoofer and to wall outlet

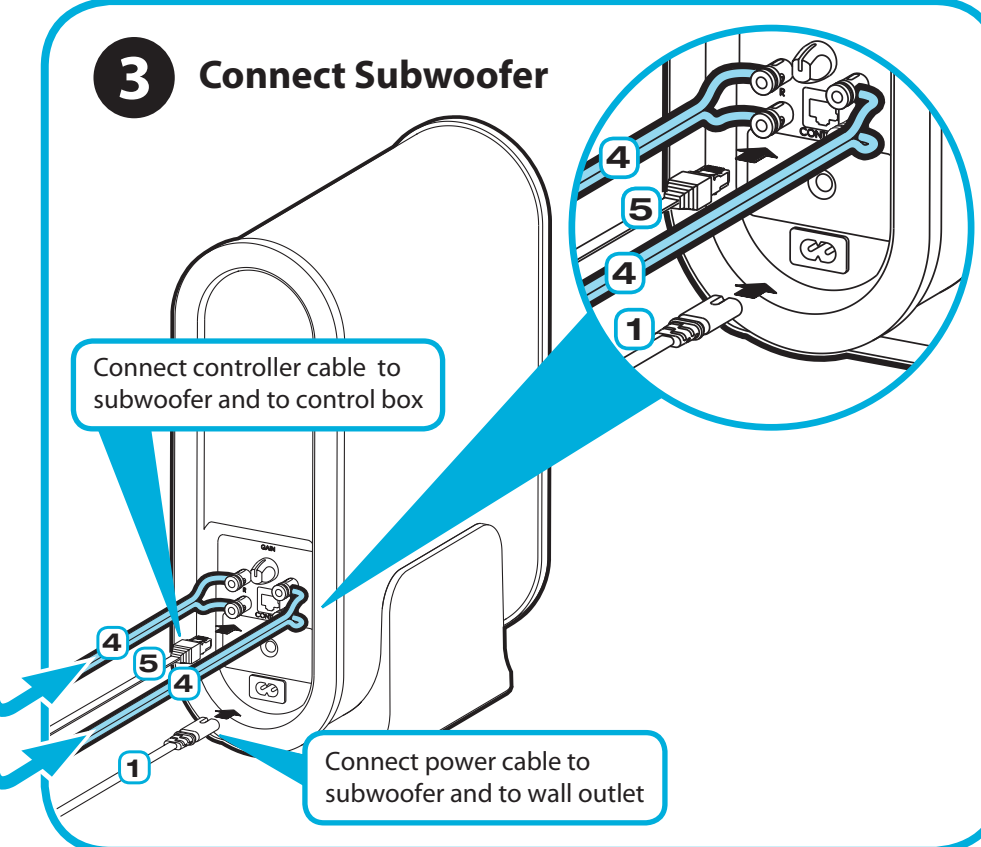


4 Connect Control Box

NOTE: Choose analog OR digital connections

TIP: If after set-up and "power on" you do not hear audio, press the "input" button on the remote.


Digital connection to TV (use for best audio)

Analog connection to TV (use for good audio)

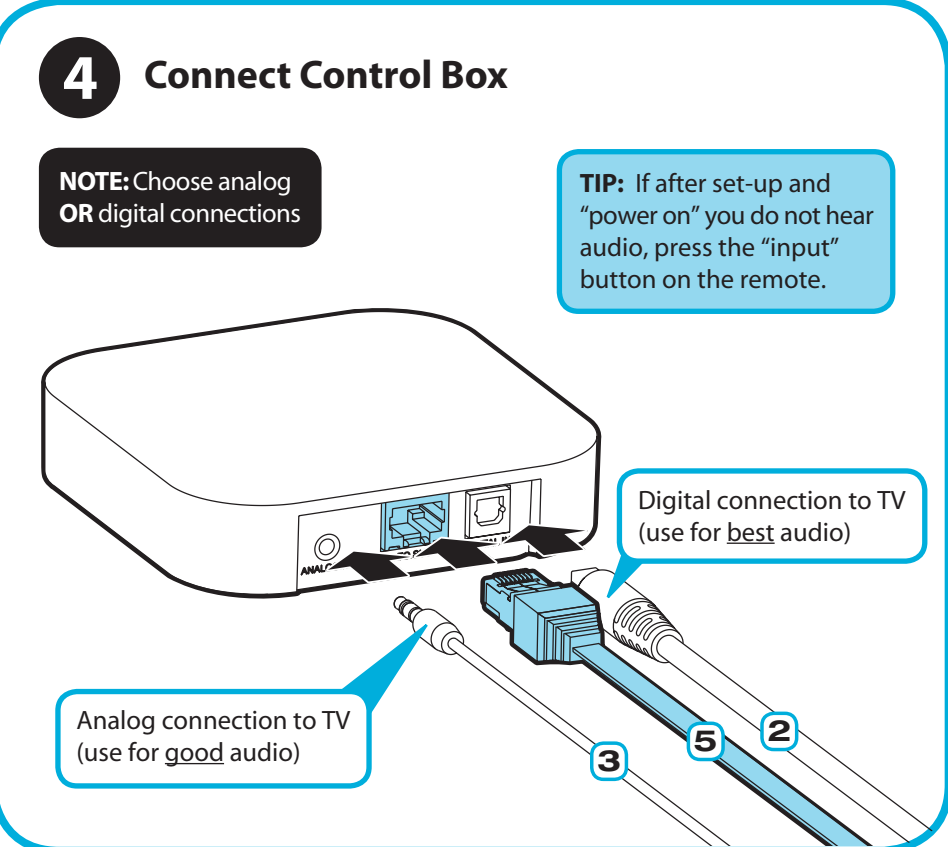

OPTIONAL:

A On Stands: Adjust angle of tilt, if desired

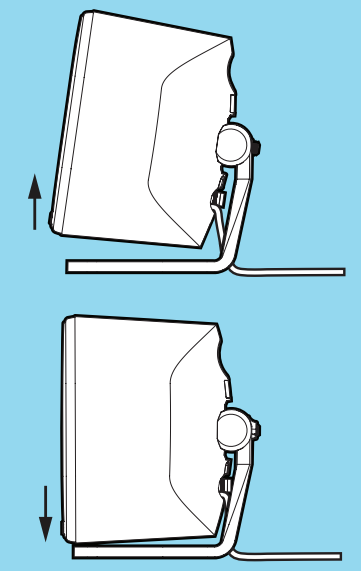

B Wall-Mounting

DO NOT supply hardware for mounting brackets to the wall. Use 2 #8 1-1/2" wood screws to mount the wall bracket to the wall. Mount bracket to wood stud or use anchor bolts rated for 20 lb weight.


Squeeze here (both sides) to allow bracket to slide snugly

Tighten knob before sliding into bracket

Adjust On-Wall Angle of Tilt, if desired

Top View

Side View

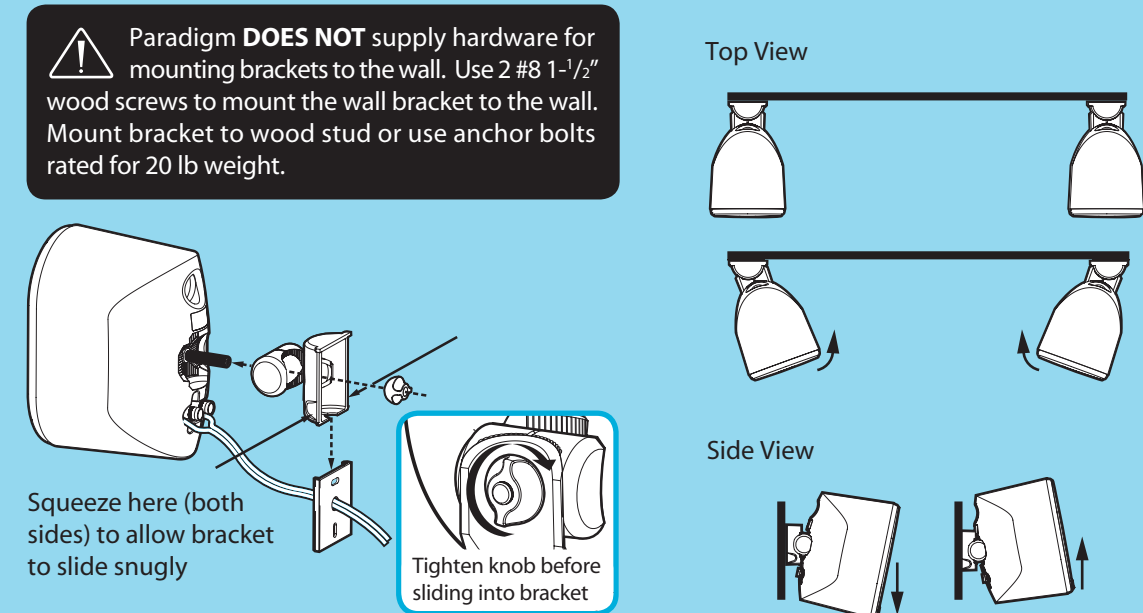


C Adjust Subwoofer Loudness

Your subwoofer's **LEVEL** switch is set to 12 o'clock to suit average preferences. If desired, adjust up or down to match sound level of your speakers.

GAIN

- BASS

+ BASS

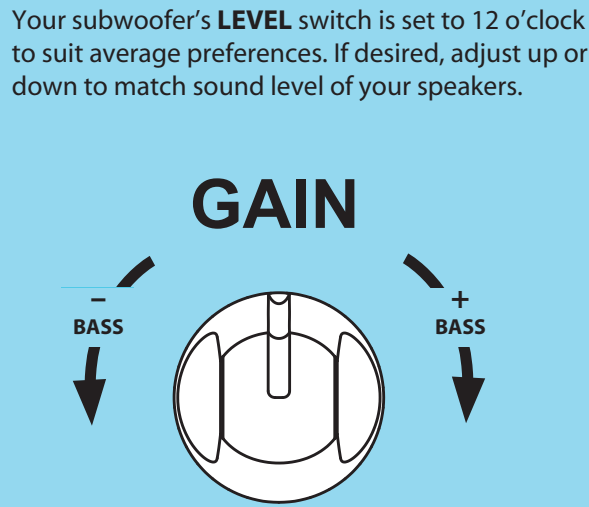

D To Use Control Box with Apple TV

Connect digital output cable

For further instructions, refer to your Apple TV Set-Up Guide.

